

# DC Ups CBI600 “AllinOne”

CBI60024A, C160048A

## Instruction Manual

### 1 Sommario

|          |                                     |          |
|----------|-------------------------------------|----------|
| <b>2</b> | <b>DC Ups CBI600Plus “AllinOne”</b> | <b>2</b> |
| <b>3</b> | <b>Product Description</b>          | <b>2</b> |
| <b>4</b> | <b>Main Characteristics</b>         | <b>2</b> |
| <b>5</b> | <b>Safety and warning notes</b>     | <b>2</b> |

|     |              |   |
|-----|--------------|---|
| 5.1 | Safety Note  | 2 |
| 5.1 | Working Note | 2 |

|          |                                     |          |
|----------|-------------------------------------|----------|
| <b>6</b> | <b>Diagram Configurations</b>       | <b>2</b> |
| 6.1      | Normal Configuration                | 2        |
| 6.2      | Parallel Configuration “Redundancy” | 2        |
| 6.3      | Series Configuration:               | 3        |

|          |                                |          |
|----------|--------------------------------|----------|
| <b>7</b> | <b>Device Connection</b>       | <b>3</b> |
| 7.1      | Connection terminal and wiring | 3        |
| 7.2      | Input Line System              | 3        |
| 7.3      | Input AC Port L – N: No.10     | 3        |
| 7.4      | Battery port: No.1             | 3        |
| 7.5      | Output Load: No.2              | 3        |
| 7.6      | Lay-Out                        | 3        |

### 8 Charge & Testing 3

|            |                                                          |          |
|------------|----------------------------------------------------------|----------|
| <b>8.1</b> | <b>Battery Care</b>                                      | <b>3</b> |
| <b>8.2</b> | <b>Charger</b>                                           | <b>4</b> |
| 8.2.1      | Battery Management Configurations                        | 4        |
| 8.2.2      | Device Configurations by Push-Button (9)                 | 4        |
| 8.2.3      | Display the charging current limit                       | 4        |
| 8.2.4      | Change the charging current limit                        | 4        |
| 8.2.5      | Displaying the ongoing charging stage                    | 4        |
| 8.2.6      | Battery Charger in a Temperature Compensated Environment | 4        |
| 8.2.7      | Charging Curve                                           | 4        |
| 8.2.8      | Fast charge                                              | 4        |
| 8.2.9      | Purification Charge                                      | 5        |
| 8.2.10     | Charger Fail – Rectifier Alarm                           | 5        |
| <b>8.3</b> | <b>Battery tester</b>                                    | <b>5</b> |
| 8.3.1      | Control by Blink LED                                     | 5        |
| 8.3.2      | SoC “State of Charge”                                    | 6        |
| 8.3.3      | SoH “State of Health”                                    | 6        |
| 8.3.4      | SoH Operation: Manual Test                               | 7        |
| 8.3.5      | SoH Operation: Automatic SoH Test                        | 7        |
| 8.3.6      | SoH Logging                                              | 7        |
| 8.3.7      | Battery Alarm                                            | 7        |

### 9 DC Ups 7

|            |                                                              |          |
|------------|--------------------------------------------------------------|----------|
| <b>9.1</b> | <b>Monitoring status and Fault conditions</b>                | <b>7</b> |
| 9.1.1      | Mains or Backup – Fail and Low Batt – Diagnosis and Charging | 7        |
| 9.1.2      | Relay Contact Rating                                         | 7        |

|            |                        |          |
|------------|------------------------|----------|
| <b>9.2</b> | <b>Input Device</b>    | <b>8</b> |
| <b>9.3</b> | <b>Output Load</b>     | <b>8</b> |
| 9.3.1      | Output Voltage         | 8        |
| 9.3.2      | Output load management | 8        |

### 9.4 Back up conditions: “Buffering Time” .... 8

### 9.5 Start from Battery Only, No Input Mains Vac 8

|            |                                                                                      |          |
|------------|--------------------------------------------------------------------------------------|----------|
| <b>9.6</b> | <b>Low Bat and Protection against total battery Discharge</b>                        | <b>8</b> |
| 9.6.1      | Low Bat - Threshold alarm of Battery almost flat                                     | 8        |
| 9.6.2      | Low Voltage Deep Discharge battery - LVD Protections against total Battery discharge | 8        |

### 9.7 Time Buffering Setting..... 8

### 9.8 UPS Disabling ..... 8

### 9.9 PC Shut Down..... 8

### 9.10 Protection Features ..... 9

### 9.11 Thermal behavior..... 9

## 10 Networking..... 9

### 10.1 Device configuration by Ethernet “Aux2” 9

|        |                                                 |    |
|--------|-------------------------------------------------|----|
| 10.1.1 | Connect HTTP server for the first time          | 9  |
| 10.1.2 | Customizing the ethernet interface and services | 9  |
| 10.1.3 | Account                                         | 9  |
| 10.1.4 | Generic and TCP/IP Configuration                | 9  |
| 10.1.5 | HTTP(s)                                         | 9  |
| 10.1.6 | SNMP                                            | 10 |
| 10.1.7 | Email configuration                             | 10 |
| 10.1.8 | Device configuration by Web-Server              | 10 |

### 10.2 How to restore default values in the device (Customer service) ..... 10

|        |                                                             |    |
|--------|-------------------------------------------------------------|----|
| 10.2.1 | Resetting the customized parameters to their default values | 10 |
|--------|-------------------------------------------------------------|----|

### 10.1 ModBus RTU “Aux1” ..... 11

|        |                                           |    |
|--------|-------------------------------------------|----|
| 10.1.1 | Electrical characteristics RS485          | 11 |
| 10.1.2 | Connection Diagram                        | 11 |
| 10.1.3 | Connect the DPY351 to Modbus in View Mode | 12 |

### 10.2 Connect ADEBus to devices ..... 12

|        |                      |    |
|--------|----------------------|----|
| 10.2.1 | ADEBus configuration | 12 |
|--------|----------------------|----|

## 11 Din Rail Mounting ..... 13



## 2 DC Ups CBI600Plus “AllinOne”

Thank you for choosing one of our products for your work.  
We are certain that it will give the most satisfaction and be a notable help on your job and application.

## 3 Product Description

It's a new revolutionary product, with an ethernet connection running diverse protocols such as HTTPS, SNMPv3, Modbus TCP. An internal webserver allows monitoring and configuring the device. A simple programming language allows extending the product functionalities by performing actions or calculations based on the value of one or more parameters. The device also features the ADELBus protocol for connecting other ADELSYSTEM devices using a CANOpen-compatible bus and Modbus RTU. Thanks to “All In One” CBI series of DC-UPS, it will be possible to optimize the power management of your system with one single, extremely compact and cost-effective device, connected directly to the mains. The available power is automatically distributed between load and battery giving priority to the load. Battery can supply the load even with mains so the output power to the load can be twice the nominal power if required (Power Boost). When mains failure occurs, the load continues to be supplied by the battery in backup mode. It is also possible to switch on the device with no mains directly from battery. The “Battery Care” algorithm performs rapid and automatic charging, continuous battery charge optimization, flat batteries recovery and real time diagnosis during installation and operation. Temperature compensation is possible by connecting the temperature sensor probe. The real time auto-diagnostic system monitors battery faults such as sulphated battery, shorted cells, accidental reverse polarity connection or disconnection of the battery. Each fault is signaled by a blink code of Diagnosis Led or via a remote connection (ethernet / ADELBus / Modbus RTU) in order to be easily detected and removed during the installation and after sales. The continuous monitoring of battery efficiency reduces the risk of battery damage and allows a safe operation in a permanent connection. Predefined curves can be selected on the front panel or via remote connection to optimize the charge of different battery types: Open Lead Acid, AGM and Gel Lead Acid; Ni-Cd, Li-Ion are rechargeable using the same device. Charging curves can be customized via the mentioned remote connections. Output contacts are used to signal backup, fault conditions and charger or rectifier failure. A rugged casing with bracket for DIN rail or Wall mounting ensures reliable operation and optimum heat dissipation.

## 4 Main Characteristics

- Input voltage: single-phase:
- 110 Vac add Bridge connection
- 230 Vac no Bridge connection
- Load output:
- 24 Vdc 25 A
- 48 Vdc 12.5 A
- Battery output:
- 24 Vdc 25 A
- 48 Vdc 12.5 A
- “All In One” solution: power supply + battery charger + backup module in one single device connected directly to the mains
- Suited for different battery types: Open Lead Acid, Sealed Lead Acid, AGM and Gel Lead Acid; Ni-Cd and Li-Ion. 5-stage IUoU (Bulk, Absorption, Float, Refresh Battery) plus Recovery stage for deeply discharged batteries
- Automatic diagnosis of battery status and battery Life Test function (Battery Care)
- Switching technology with high efficiency
- Protected against short circuit, overload and inverted polarity

- Dry output contacts for signaling Low Battery or Battery Replacement, Faulty system and charger or rectifier failure
- IP20 protection degree
- Space saving on DIN rail and wall mount

## 5 Safety and warning notes

### 5.1 Safety Note



To safely operate this Device please read and follow all instructions carefully before attempting to unpack, install, or operate.

**WARNING** – Explosion Hazard: do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous.

**WARNING** – Explosion Hazard. Replacement of components may impair suitability for class I, Division 2.

**WARNING** – Switch off the system before connecting the module. Never work on the machine when it is live. The device must be installed according to EN50178 or EN60364. The device must have a suitable isolating facility outside the power supply unit, via which it can be switched to idle. Danger of fatal injury!


**WARNING** – The device is equipped with an internal fuse. If the internal fuse blows, it is most probable that there is a fault in the device. If this failure occurs, the device must be returned to the factory.

### 5.1 Working Note

- This equipment is not suitable for use in locations where children are present.
- This equipment is intended for installation in restricted access area.
- This equipment requires a connection to the PROTECTIVE EARTHING CONDUCTOR.
- An all-pole MAINS switch in accordance with Annex L of UL 62368-1 is required.
- Proper bonding to the end-product main protective earthing termination is required.
- The following end-product enclosures are required: Fire, Electrical, Mechanical

## 6 Diagram Configurations

### 6.1 Normal Configuration

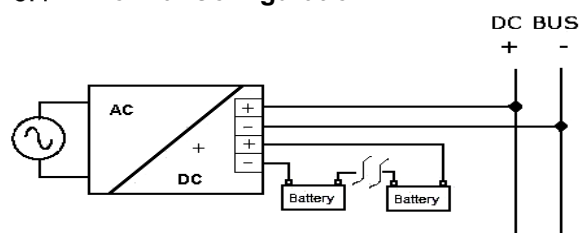


Typical application for All In One device, one output for Load “DC Bus”, one Input / Output for connection to the battery.

Two 12-V batteries connected in Series for CBI60024;

Four 12-V batteries connected in Series for CBI60048;

### 6.2 Parallel Configuration “Redundancy”

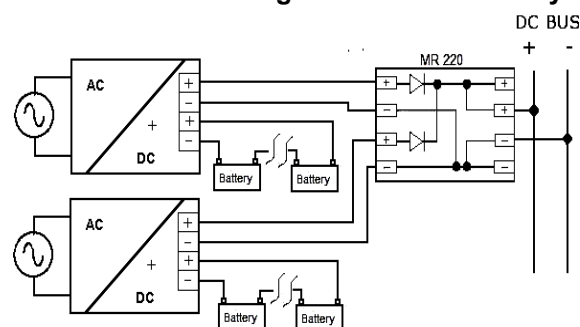


Parallel connection “Redundancy”

Power supplies can be paralleled in case of redundancy to obtain a higher system reliability. Redundant systems may support N+1 redundancy to safeguard against single-point failures, or to enable hot-swapping of a failed supply without impacting the system. The simplest way is to put two CBI devices in parallel. In case one power supply unit fails, the other one is automatically able to support the load current without any interruption. To separate completely a hypothetical device failure, it is necessary add the decoupling diodes which are included in the Redundancy Module MR220. Recommendations for building redundant power systems: a) Use separate input fuses for each CBI. b) Monitor the individual CBI units by three LED. Each unit has three relays: Mains or backup, Low Battery or Battery Replacement (faulty situation)

and charger or rectifier failure. This feature reports a faulty unit; see Relay Contact Rating for any technical detail. c) When possible, connect each power supply to different phases or circuits

## 6.3 Series Configuration:

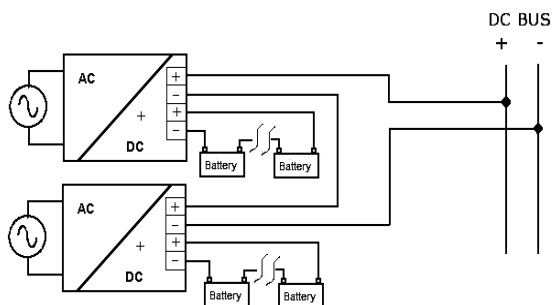

It is possible to connect as many units in series as needed, provided the sum of the output voltages does not exceed 150VDC. Please notice that:  
a) Voltages above 60VDC are not SELV anymore and can be dangerous. Such voltages must be installed with a protection against touching. b) For series operation use power supplies of the same type. c) Earthing of the output is required when the sum of the output voltage is above 60VDC. d) Keep an installation clearance of 10 mm (left/right) between two power supplies and avoid installing the power supplies on top of each other. Note: Avoid applying a backfeed voltage (e.g. from a decelerating motor or battery) to the output terminals.

## 7 Device Connection

### 7.1 Connection terminal and wiring

The following cable cross-sections may be used:

|        | Solid (mm <sup>2</sup> ) | Stranded (mm <sup>2</sup> ) | AWG     | Torque (Nm) | Stripping Length |
|--------|--------------------------|-----------------------------|---------|-------------|------------------|
| In     | 0.4                      | 6.0                         | 30 – 10 | 0.8 – 1     | 7 mm             |
| Out    | 0.4                      | 6.0                         | 30 – 10 | 0.8 – 1     | 7 mm             |
| Signal | 0.2 - 2                  | 0.2 - 2                     | 24 - 14 | 0.5 – 0.6   | 5 mm             |


Screw connection, type 2.5 mm<sup>2</sup> or 4.0 mm<sup>2</sup> terminal blocks. Wiring terminal shall be marked to indicate the proper connection for the power supply. Use copper cables only for supply connections.

AC main wirings shall be suitable for minimum 80 °C.


Protective Earth connection section must be minimum 4mm<sup>2</sup>/10AWG

### 7.2 Input Line System

Primary switch mode power supply for connection to 1-phase AC and DC line systems. For AC line systems (TN, TT and IT system in according to IEC 60364-1) with rated voltage 110 -240, 50 – 60Hz. Output Voltage 12 -24-48 VDC , isolated and no-load proof.

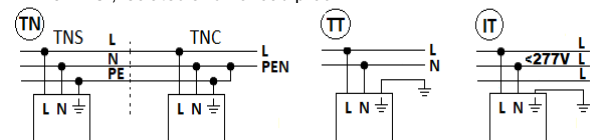

### 7.3 Input AC Port L – N: No.10



BRIDGE ONLY for input 115 Vac, and connect L, N, PE.

### 7.4 Battery port: No.1

Connect the battery between: terminal 3 (–) and 4 (+)

- Two 12-V batteries connected in Series for CBI60024;
- Four 12-V batteries connected in Series for CBI60048;

### 7.5 Output Load: No.2

Connect this Output to the load, terminal 1 (–) and 2 (+).

## 7.6 Lay-Out

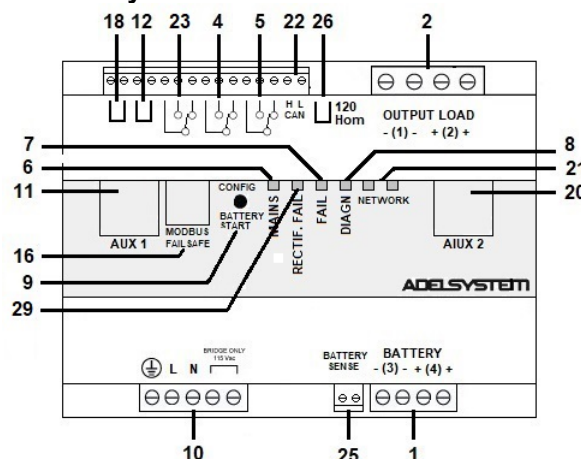


Fig. 2 –Connection terminal

| Reference | Description                                                              |
|-----------|--------------------------------------------------------------------------|
| 1         | Battery                                                                  |
| 2         | Load                                                                     |
| 4         | System / Battery fault (or reconfigurable by Web Server)                 |
| 5         | Mains – Backup (or reconfigurable by Web Server)                         |
| 6         | Mains – Backup LED                                                       |
| 7         | Battery fault – System fault LED                                         |
| 8         | Diagnosis LED                                                            |
| 9         | Configuration – Start from Battery; Push Button                          |
| 10        | Input Vac                                                                |
| 11        | Aux1:RJtemp-DPY353-- DPY351-ModBus RTU (RS 485)                          |
| 12        | Start from Battery / UPS Enable when set as disabled                     |
| 16        | Bus Termination: ModBus RS485: Fail Safe and 120 Ohm                     |
| 18        | Fast / Boost Charge                                                      |
| 20        | Aux2: Ethernet                                                           |
| 21        | Network Communication LED                                                |
| 22        | ADELBUS (CAN)                                                            |
| 23        | Charger Fail (or reconfigurable by Web Server)                           |
| 25        | Battery Sense: Connect to pole + and – of the battery for SoH detection. |
| 26        | 120 Ohm LT CAN. Insert jumper to enable it                               |
| 29        | Charger / Rectifier Fail LED                                             |

## 8 Charge & Testing

### 8.1 Battery Care

Battery Care is a philosophy of charging and testing based on algorithms that implement rapid and automatic charging, battery charging optimization over time, flat batteries recovery and real time diagnostic during installation and operation. Batteries elements in short circuit, accidental reverse polarity connection, disconnection of the battery, high internal resistance, can easily be detected and identified by means of unique blink codes of the Diagnosis LED, during the installation and normal operations. Each device is suited for all battery types, it is possible setting predefined curves for Open Lead Acid, Sealed Lead Acid, Gel, Ni-Cd, Li-Ion. All devices guarantee battery reliability in time by continuously testing the internal impedance status, avoiding any possible risk of damage and granting a permanent, reliable and safe connection of the battery to the power supply. The system is able through an internal battery stimulation circuit, to recognize sulphated batteries or batteries with one or more short-circuited elements. The battery testing is carried out automatically every 60 sec. for the all basic battery check and every 220 minutes in Float charge, for the battery efficiency test. Battery Faults

can be monitored by means of relays, led blinking and via remote connection (ethernet, ADELBUS, Modbus RTU).

## 8.2 Charger

### 8.2.1 Battery Management Configurations

Completely automatic, all devices are suitable to charge most batteries types thanks to User Selectable charging curves. They can charge open lead acid, sealed lead acid, Gel, Ni-Cd and Li-Ion. It is possible to change or add other charging curves connecting the web server device to a PC. The battery must be disconnected during the program operations, otherwise it is not possible the choice of the Battery type.

### 8.2.2 Device Configurations by Push-Button (9)

To display the current device configuration, press the Config/Start button briefly (< 1 sec). The LEDs will show in sequence the configurations listed in the table at the end of this section. By pressing the button again, the sequence stops and the display returns to normal operation.

To change the device configuration, follow the procedure below;  
(note: if the procedure is not completed no settings are saved; the procedure is aborted if no command is given for 60s).

Note: the device can also be configured by Web Server.

#### With battery disconnected:


- press the Config/Start button No.9 for more than 2 seconds, until the LED 7 starts flickering
  - Battery Type Chemistry:** press briefly the button to cycle through the battery types as shown by the number of green blinks of LED 8: refer to the table at the end of this section,
  - Then, confirm with a long press until the LED 7 turns ON solid.
- Release the button: LED 29 will start flickering
  - Life Test Enabling:** press briefly the button to change Life Test: ON/OFF as shown by LED 8
  - Then, confirm with a long press until the LED 29 turns ON solid.
- Release the button: LED 6 will start flickering.
  - UPS Enabling:** press briefly the button to change UPS Enabling: ON/OFF as shown by LED 8
  - Then, confirm with a long press until the LED 6 turns ON solid.
- End Programming: the device shows in sequence the selected configurations as listed in the table at the end of this section then resumes normal operation,

#### With battery connected:

- press the Config/Start button No.9 for more than 2 seconds, until the LED 29 starts flickering
- follow the procedure above from step "Life Test" (Battery Type can be changed only when the battery is not connected).

| Battery Type chemistry and Configuration Mode Selection |                    |        |        |                       |                                                  |
|---------------------------------------------------------|--------------------|--------|--------|-----------------------|--------------------------------------------------|
|                                                         | LED Configuration: |        |        |                       |                                                  |
|                                                         | 6                  | 29     | 7      | 8                     |                                                  |
| Open Lead                                               | Off                | Off    | Cyclic | 1 blink               | 2.23                                             |
| AGM Low                                                 | Off                | Off    | Cyclic | 2 blinks              | 2.25                                             |
| Gel Battery                                             | Off                | Off    | Cyclic | 3 Blinks              | 2.30                                             |
| Ni-Cd                                                   | Off                | Off    | Cyclic | 4 blinks              | 1.4V/cell<br>(24V:20 cells)<br>(48V:40 cells)    |
| Li-Ion<br>LiFePo4                                       | Off                | Off    | Cyclic | 5 blinks              | 3.65V/cell<br>24Vfield: 27.6V<br>48Vfield: 55.2V |
| Battery<br>Life test ON                                 | Off                | Cyclic | Off    | Red: Off<br>Green: On | 3.45V/cell<br>24Vfield: 29.2V<br>48Vfield: 58.4V |
| UPS<br>Enabling                                         | Cyclic             | Off    | Off    | Red: Off<br>Green: On | backup inhibited if (12) is open                 |

### 8.2.3 Display the charging current limit



When the device is not in the Device Configuration mode (section 7.2.2) double-click button (9): three LEDs (6,29,7) will turn on solid and LED 8 will blink to show the current limit in steps of 5% of In:

- 1 to 10 red blinks: 5% to 50% In
- 1 to 10 green blinks: 55% to 100% In

### 8.2.4 Change the charging current limit

In order to protect the battery from excessive charging currents, the device allows to limit the maximum charge current by selecting the charging current limit using the user interface as described below or via remote connection (including the webserver). To determine the maximum battery charge current, refer to the battery datasheet or, if not available, consider that typically the maximum recommended charge current is 10% of Ah's rated battery current, for all the chemistries.

If, while displaying the charging current limit outlined in section 7.2.3 the button (9) is briefly clicked, the device user interface enters the charging current limit setting mode; the three LEDs (6,29,7) start flickering: click the button multiple times to change the limit current in 20 steps from 5% to 100% of In. Press for more than 2 sec. to store the selection in permanent memory.

CBI60024A: from 0 to 20A ; 20 step; 1 step 1A

CBI60048A: from 0 to 10A ; 20 step; 1 step 500mA

### 8.2.5 Displaying the ongoing charging stage


When mains is available and the battery is connected, the LED Diagnosis N°8 displays the ongoing charging stage by means of a blinking code. The same information is provided via the mentioned remote connection, also.

| Charging State | LED Configuration: |     |     |              |
|----------------|--------------------|-----|-----|--------------|
|                | 6                  | 29  | 7   | 8            |
| Float          | Off                | Off | Off | 1 blink/2sec |
| Absorption     | Off                | Off | Off | 1 blink/sec  |
| Bulk           | Off                | Off | Off | 2 Blinks/sec |
| Recovery       | Off                | Off | Off | 5 blinks/sec |
| Purification   | Off                | Off | Off | ON           |

### 8.2.6 Battery Charger in a Temperature Compensated Environment

No. 11 - Remove the window label to find the connector: Auxiliary Output "AUX 1".

It is possible to connect the Temperature sensor probe and apply it on the battery in order to adjust the battery charging voltage according to the battery temperature. This feature allows to meet the requirements of the EN54- fire certification also.



- PN: RJTEMP451N (1 m length)
- PN: RJTEMP453N (3 m length)

#### 8.2.6.1 Battery Temperature Compensation Charge (not for Li-Ion)

Connecting the cable RJTEMP (supplied separately) to Auxiliary Output AUX1, the CBI will adjust the battery charging voltage according to the battery temperature.

| Fast Charge: Open Lead, AGM, Gel                                                                                                            | Float charge: Open Lead, AGM, Gel                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>+/- 5mV/°C x n. Cells</li> <li>-8°C to +60°C</li> <li>+140 ÷ -200 mV/Cell Refer: 20°C</li> </ul>     | <ul style="list-style-type: none"> <li>+/- 3mV/°C x n. Cells</li> <li>-20°C to +60°C</li> <li>+120 ÷ -120 mV/Cell Refer: 20°C</li> </ul>    |
| Fast Charge: Ni-Cd                                                                                                                          | Float charge: Ni-Cd                                                                                                                         |
| <ul style="list-style-type: none"> <li>+/- 2.5 mV/°C x n. Cells</li> <li>-20°C to +60°C</li> <li>+100 ÷ -100 mV/Cell Refer: 20°C</li> </ul> | <ul style="list-style-type: none"> <li>+/- 2.5 mV/°C x n. Cells</li> <li>-20°C to +60°C</li> <li>+100 ÷ -100 mV/Cell Refer: 20°C</li> </ul> |

The device stops charging the battery if the temperature is below -20°C or above +60°C. The sensor placed on cable RJTEMP must be applied on the battery.

### 8.2.7 Charging Curve

Automatic multi-stage operation and real time diagnostic allow fast recharging and recovery of deeply discharged batteries, adding value and reliability to the system hosting the CBI device. The type of charging is voltages stabilized and current stabilized IUoU. Five charging phases are identified by a flashing code on a Diagnosis LED or Modbus (refer to Charging State). To keep the Output Load voltage close to the nominal voltage (12, 24, 48V), keep the contact in position 18 not shorted together in order to disable the fast charge. When Fast Charge is enabled the device activates the "Cyclic Refresh Charging" every 288h for 85 minutes at 2.4V/Cell.

### 8.2.8 Fast charge


The fast charge can be remotely drive by using the Fast Charge/UPS disabling Input in front of the device (No.18).

- To manage the Fast charge feature by the Input connector (No.18) the HR40088 "UPS Disable" must by =0. In this



condition, the jumper takes precedence over HR40083: irrespective of the previous holding register value, if the contact is close the fast-charge is enabled; if the contact is open, the fast-charge is disabled, but it is not possible to disable the fast-charge with the holding register while the jumper is engaged. If, on the contrary, the contact is open, the holding register can be used to activate/deactivate the fast-charge feature as desired. In float charge, it is always possible to write the value 1 in the holding register or to insert the jumper to force a return-to-bulk charging.

- Otherwise If HR40088 = 1, the Input is assigned to the UPS Disabling functionality, and the fast charge is only managed by means of HR40083 "Fast charge" holding register: if HR40083 = 1 the fast charge is enabled, if HR40083 = 0 the fast charge is disabled.

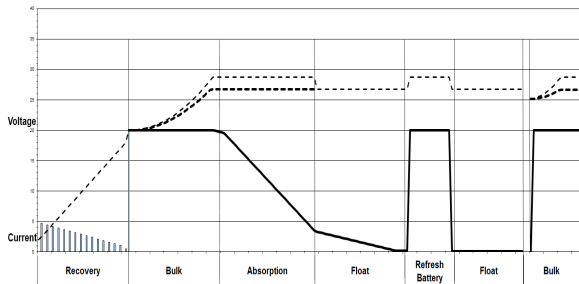

## 8.2.9 Purification Charge

### 8.2.9.1 What is it?


Purification charge is suggested in applications where it is necessary to refresh the electrochemical state of the battery, such as stationary applications, where batteries stay for long time in float or trickle condition without providing power to the load. In such prolonged inactivity the batteries may become less efficient thus impairing their capability of sustaining the load in the event of a mains outage. For this purpose we have developed the following feature:

### 8.2.9.2 Two PURIFICATION TECHNIQUES

The Adelsystem CBI range of devices implement two different techniques to purify the battery electrolyte:

- Battery refresh charge: done automatically every 12 days (or 288h) for 85 min at 2.4V/cell. This stirs the electrolyte by moving oxygen inside and help to remove oxide on the internal plates.
  - Conditions:
    - Only if the Fast-charge is enabled.
    - For Lead-acid batteries only
- Battery purification: a controlled battery discharge that exercises the batteries and helps desulphate and rejuvenate the batteries. This is suggested in stationary applications and even recommended to be part of the standard working cycle of some chemistries such as Lead Crystal. To maximize the effectiveness of this technique, a load should be connected to the device output load terminals. The battery purification can be programmed to be done periodically and can be configured in terms of purification timeout and end-of-purification SoC level: the purification ends when either the timeout has expired or the SoC level has been attained, whichever occurs first.
  - Conditions:
    - Remote connection to the CBI's AUX1 (for Modbus RTU) or AUX2 (for ethernet-based SNMP, Modbus TCP or webserver) connector is needed, because purification is configured and activated only from remote
    - Install ADELViewSystem on the PC or use the internal webserver, otherwise it is necessary to use a custom-developed software
    - Connect the CBI to the PC or PLC through the selected communications interface
  - Configure the battery capacity using the information provided by the battery datasheet. This is required in order for the CBI to compute the state-of-charge to be attained at the end of purification. Provide as many battery capacity parameters as possible from the battery datasheet and leave the others at 0
    - Setting:
      - Battery Capacity C20: HR40105
      - Battery Capacity C10: HR40106
      - Battery Capacity C5: HR40108
      - Battery Capacity C2: HR40109
      - Battery Capacity C1: HR40112
  - Set the Battery purification period, i.e. the time interval between two subsequent battery purifications; If HR40098 is set to Zero, the device does not perform the Battery Purification
  - Battery purification period: HR40098 (the parameter is in hours, range; 120 thru 18000, default value: 0 – no purification)
  - Set the Battery purification timeout, i.e. the maximum allowed duration of the purification

- Battery purification timeout: HR40123 (the parameter is in minutes, range 5-1800 minutes, default value: 480)
- Set the SoC level at the end of purification.
  - SoC level at end of purification: HR40124 (the parameter is in units of 0.1%, range 300-900, default value: 500)
- Purification Battery Test condition
  - SoC > 95%
  - Minimum load current 0.5 A

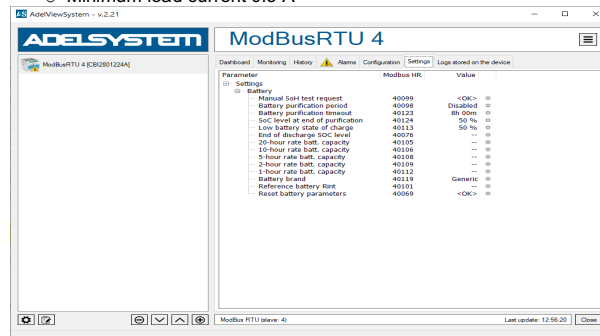

## 8.2.10 Charger Fail – Rectifier Alarm

To provide the maximum reliability in the system the device, continuously and unobtrusively, monitors its internal circuits. In the case the charger circuitry is faulty or malfunctioning, the Charger Fail or Rectifier fail alarm is activated.

## 8.3 Battery tester

### 8.3.1 Control by Blink LED

All CBI devices support the user during Diagnosis installation and operation. A Blink code of the Diagnosis Led allows to discriminate among various possible faults.

All the error conditions are signaled by means of the Fault LED that is lit and the Battery fault alarm on. The diverse errors are uniquely identified by a blink code of the Diagnosis LED. See the following table.

|                       | Status                                                                                                               | Diagnosis      | Fault Batt |
|-----------------------|----------------------------------------------------------------------------------------------------------------------|----------------|------------|
| Auto Diagnosis System | Reverse polarity or high battery Voltage (over 32.5Vdc for CBI 24xxA)                                                | 1 Blink/pause  | ON         |
|                       | Battery not connected                                                                                                | 2 Blink/pause  | ON         |
|                       | Battery element in Short Circuit                                                                                     | 3 Blink/pause  | ON         |
|                       | Overload or short circuit on the load                                                                                | 4 Blink/pause  | ON         |
|                       | Bad battery; high internal impedance or bad battery wiring                                                           | 5 Blink/pause  | ON         |
|                       | Life test not possible                                                                                               | 6 Blink/pause  | ON         |
|                       | Charger Fail                                                                                                         | 7 Blink/pause  | ON         |
|                       | Boost condition; battery discharge after 10 sec. of overload                                                         | 8 Blink/pause  | ON         |
|                       | Internal fault                                                                                                       | 9 Blink/pause  | ON         |
|                       | Low battery (under 20Vdc for CBI 24xxA) Only if started from battery, no Mains input, from Jumper N°5 or Push Button | 10 Blink/pause | ON         |
|                       | Master-Slave connection lost between the master and slave on parallel configuration, (AP device only 500W)           | 11 Blink/pause | ON         |
|                       | Battery temperature cable not connected – charging cannot start (only when NiMH is selected)                         | 12 Blink/pause | ON         |
|                       | Bad battery wire connection; Parallel mode on Slave Device (AP device only 500W)                                     | 13 Blink/pause | ON         |
|                       | Charging current limit too high – charging cannot start (only for Size 3 when NiMH is selected)                      | 14 Blink/pause | ON         |
|                       | Boost condition; battery discharge after 4 min. of overload; Parallel mode on Slave Device (AP device only 500W)     | 15 Blink/pause | ON         |

### 8.3.2 SoC “State of Charge”

The algorithm for the estimation of the battery State-of-Charge “SoC” implemented in the 600-VV range of CBIs allows, at any time, the real-time monitoring of the actual charge available in the battery that can be provided to the load in the case of a mains outage. Moreover, such algorithm, leveraging the Adelsystem Battery Care system, monitors highly significant battery health indicators over time to quantitatively assess the health of the battery thus allowing preventive maintenance to be implemented. This allows the early diagnosis of potential battery failure that might lead to system downtime. Since both the state-of-charge and the state-of-health depend on the battery ratings, it is essential that the correct battery parameters be set in the CBI. Such group of parameters will be referred to as the “Battery settings”; they can be dialed in the CBIs using the remote connections, including the webserver.


#### 8.3.2.1 SoC: Battery settings how to configure the internal algorithm

The battery settings describe the rated capacity of the battery. All of these parameters are used by the CBI to compute a battery model which is used to determine the SoC readouts on the basis of the measured battery voltages and currents.

All of these parameters can be written to the specified holding registers both when the CBI is in the monitoring and in the configuration mode, but only when the battery is not wired.

The battery capacity parameters are mapped as follows:

- HR40105: C/20 rated capacity, also known as the 20-hours capacity
- HR40106: C/10 rated capacity, also known as the 10-hours capacity
- HR40108: C/5 rated capacity, also known as the 5-hours capacity
- HR40109: C/2 rated capacity, also known as the 2-hours capacity
- HR40112: C/1 rated capacity, also known as the 1-hour capacity

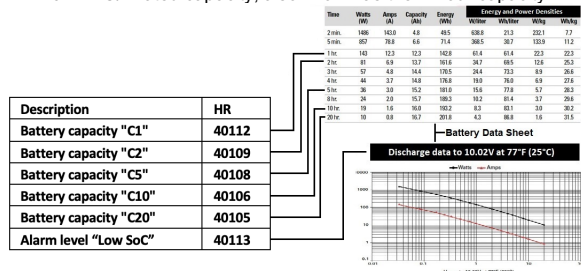

When the battery settings are entered, the algorithm computes the effective battery capacity based on the available data. The more data are provided, the more accurate the SoC results are provided.

In the Web Server interface, it is possible to insert the nominal battery values in Ah, if the device is connected to customized Software, the values must be entered in units of tenth of Ah, e.g. the value 75 means 7.5Ah.

The values should be those specified at ambient temperature: in fact the temperature compensation is implemented by the CBI provided the battery temperature probe is connected to the CBI.

The battery capacity figures are usually available from the battery datasheet, although not all the hour-ratings may be available. Note however that it is NOT necessary to provide ALL the hour-ratings in order for the algorithm to be operational: enter as many ratings as they are available and set the others to zero. The algorithm will work out the battery model based on the data provided: the more data are entered, the higher the accuracy of the model and consequently of the results obtained from it.

The SoC-low alarm threshold can be set, in units of per mille (900 = 90%) using holding register HR40113. Similar to all the Battery Settings parameters, it accepts writes both in monitoring and configuration mode. However, it can be written even if the battery is wired.

The State-of-Charge is measured both during charge and during discharge. Its value, expressed as the ratio of the available internal capacity to the battery internal capacity can be read from HR40023 in per-mille units. (e.g. 1000 = 100%). The presented SoC is compensated for temperature, aging and current magnitudes.

Moreover, during discharge the SoC can be read also in terms of the remaining buffering time before the battery reaches 0% SoC with the present load. Such remaining time can be read from the HR40022 in units of seconds. Note however that this is an approximate estimation which can vary significantly with the load.

The capacity consumed (HR40016) describes the net charge that has been consumed from the battery. It can be read in units of 10<sup>th</sup> of Ah (e.g. the value 75 means 7.5Ah) from holding register HR40016.

Two history parameters aid the user in keeping track of the battery usage: it is the maximum depth-of-discharge (HR40061) and the average depth-of-discharge (HR40064). Both are updated during discharge and are reported in percentage units and are preserved through power-cycling. The information about depth-of-discharge is valuable for determining whether the battery, during discharge, often approaches low-SoC conditions. If this is the case, it may be worth using higher-capacity batteries. In fact, running batteries at conservative depth-of-discharge ratings is an effective way to prolong their useful life. Such history parameters can be reset by writing the value 0 individually or along with all of the other histories by issuing the History Clear All command (HR40065 = 1). The two histories do NOT get cleared by a Battery Reset command (HR40069 = 1). Also, changing the chemistry will not clear such histories.

### 8.3.3 SoH “State of Health”

The measurement of the battery internal resistance requires that the device be setup properly as well.

#### 8.3.3.1 Set Up the device for SoH Measurement

First of all it is necessary to configure the device to enable the SoH calculation:

- Enable the lifetest as described in section 7.2.2

#### 8.3.3.2 Cable Configuration

It is necessary to set the multimeter inside the device should test the battery with or without the Battery Sense connection. The SoH measurements can be carried out directly from the battery power cables. In such case the cables resistance must be known and set into the CBI. For this purpose, the CBI can conveniently and autonomously compute the cables resistance. The Battery Sense Connection allows taking the measurements directly at the battery posts thus bypassing the resistance of the power cables connected between the device and the battery, thus providing a higher degree of measurement accuracy at the expenses of a slightly more complicated harness (four cables instead of two).

So, it is possible choose the configuration of the devices with or without the Battery Sense connection:

- Battery Sense connection YES (Fig.5);
  - Connect the N°2 additional wires from the Battery Sense terminal of the device, to the Battery posts + and -; HR40004 provides the Voltage measured from the battery sense. The battery sense wires allow the battery voltage to be accurately measured without the influence of any possible ohmic drop due to charging/discharging currents in the battery power cables
- Battery Sense connection NO (Fig.6)
  - It is possible to acquire the cable resistance in auto acquisition mode, by using the Wizard provided by ADELViewSystem Software or,
  - It is possible to provide the cable resistance, if it is known, by entering the value in HR40102

The devices can operate either with or without the battery sense connections. If the battery sense cables are correctly connected as in Fig.5, the device automatically detects them and uses them for the battery internal resistance measurements. In such case the battery cables resistance measurement information (HR40102) is neither needed nor used. This configuration is the one which ensures the maximum measurement accuracy because it is not influenced by the battery cables resistance.

If, on the contrary, the battery sense cables are not wired or are not correctly wired (e.g. wired with reverse polarity), the device will make use of the battery cables resistance (direct write to HR40102 in units of 0.1mohm or use the mentioned wizard) to compute the battery internal measurement; if no cable resistance is provided (HR40102=0) the device will not carry out the battery internal resistance measurement.

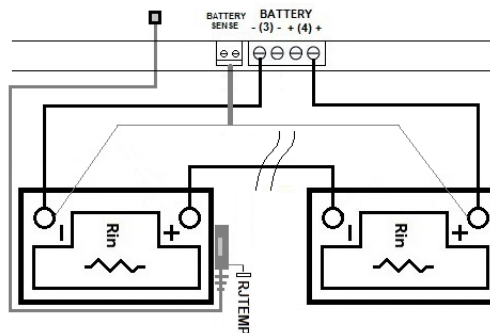


Fig.5

### 8.3.3.3 Internal battery Resistance Configuration

- Enter the Nominal Internal Battery Resistance from the datasheet of the battery: HR40101, units 0.1 m ohm; *Rint Nom*. The Value is used as *Rint Ref* during the first days after the onset of float charge. The value entered in HR40101 must be the nominal resistance of the entire battery pack and not that of the single battery: if two batteries are wired in series, the value to be entered is twice the value found on the single battery datasheet, four-times if four batteries are wired in series.
- After the first days of initial measurement of the internal battery resistance compared against the *Rint Nom* HR40101, the device identifies the optimal value of the *Rint Ref*, the battery internal resistance reference value.  
This value will be kept as a reference for the future calculation of the SoH during all subsequent test. The *Rint Ref* Holding Register is HR40015

### 8.3.3.4 Control Indicators

To help in the SoH configuration and for the monitoring of the operation of the SoH algorithm, the HR40033 provides all the information about potential issues detected by the device that could impair the SoH measurements or event prevent their calculation from being carried out. HR 40033 Battery state of charge and state of health alarm

- bit 0: low state-of-health, internal resistance of the battery too high. It is not updated when the Manual SoH test is requested by writing 1 to HR40099
- bit 5: unexpected values in the measured *Long Term Rint. Meas*: check cables resistance. Can occur only if the battery sense cables are not used
- bit 7: low state-of-health by Manual SoH test, battery internal resistance is too high
- bit 8: low state of charge
- bit 11: SoH calculation not possible because no reference *Rint Nom* has been provided in HR40101
- bit 12: Measured internal resistance exceeding 6.5 ohms. Check battery and, if battery sense leads are not used, the battery power cables
- bit 13: *Rint* and SoH calculations not possible because the battery sense is not connected and no cable resistance has been provided

Finally, the device is ready to do the SoH Measurement on the Battery

### 8.3.4 SoH Operation: Manual Test

The Manual test can be triggered by means of the DPY351, ADELViewSystem or by a customized SW.

The test is enabled only when the battery has been evaluated as fully charge from the CBI, consequently the conditions for the test are only when the battery charger is in Floating – Trickle charge.

Procedure for the Manual Test:

- After 150 minute from the transition to Float charge the HR40100 is =1; this means "Device Ready for the Manual SoH Test"
- When such condition is met, start the test by writing 1 in HR40099. The test takes less than 1 minute.
- The test ends when HR40099 reverts to zero. A new test is possible in 12-15 min.
- Test Result:
  - Internal Battery Resistance "*Rint Meas*" units of 0.1 m Ohm measured during Manual Test: HR40115
  - Battery Manual SoH in % "State of Health" measured during manual test: HR40116
  - =0% when  $HR40115 = HR40015 \times 2.5$
  - =100% when  $HR40115 = HR40015$

The HR40117 is for monitoring the type SoH test: =0 No test; =1 Manual Test in Progress; =2 Automatic Test in Progress

The battery datasheet usually states the typical battery internal resistance at room temperature. In the case the battery temperature probe is available, the CBI will compensate the battery nominal resistance for the battery measured temperature.

### 8.3.5 SoH Operation: Automatic SoH Test

The Automatic test can be carried out by means of DPY351, ADELViewSystem or by a customized SW.

The test is enabled only when the battery has been evaluated as fully charge from the CBI, consequently the conditions for the test are only when the battery charger is in Floating – Trickle charge.

Procedure for the Automatic Test:

- The test is activated automatically from the device and it is repeated every 90min in Float Charge
- Test Result:
  - Average Internal Battery Resistance "Long Term *Rint Meas*" units of 0.1 m Ohm measured during Automatic Test: HR40028
  - Battery Long Term SoH in % "State of Health" measured during automatic test: HR40021

- =0% when  $HR40028 = HR40015 \times 2.5$
- =100% when  $HR40028 = HR40015$

The HR40117 is for monitoring the type SoH test: =0 No test; =1 Manual Test in Progress; =2 Automatic Test in Progress

The battery datasheet usually states the typical battery internal resistance at room temperature. In the case the battery temperature probe is available, the CBI will compensate the battery nominal resistance for the battery measured temperature.

Notice that the SoH values of HR40021 and HR40116 may be different because the HR40021 value is an average value over several evaluations and better describes the time-evolution of the battery state of health. When the battery reset command is issued ( $HR40069 = 1$ ), the HR40021 SoH will be reset as long as the respective internal algorithm.

## 8.3.6 SoH Logging

The device has an internal non-volatile lifetime log that allows storing values of the measured battery internal resistance (*Rint Meas*) and the corresponding SoH. Such data are periodically collected and stored into the log once a day.

Logged SoH and *Rint Meas* data are accessible via the internal device webserver and can be downloaded as a .csv file for convenient processing by means of a standard spreadsheet application.

## 8.3.7 Battery Alarm

By the contact Relay N°4 the device switch when happen fail on the battery, or bad connection, or bad charging system. To understand the right cause of the failure the device provides two way to understand:

- True Blink code by the LED Diagnosis N°8
  - True Modbus Holding Register
- The Main register for the **Battery Fault** is HR40032 for all Bit 1...10 provide Alarm data for bad Battery or bad battery condition as:
    - HR40032.0 Reverse Battery Connection
    - HR40032.1 Battery not connected
    - HR40032.2 Internal Battery cell shorted
    - HR40032.3 Sulphated or damaged Battery; if Life Test Enabled
    - HR40032.7 Bad battery Cable or connection
  - The register **Low Batt**: HR40035.1  
Provide Alarm Information about the Battery energy below the threshold value default 30%; in the state of Charging and Back Up situation.

Alarm goes to 1 when, the Battery Voltage or the Battery SoC goes lower than the following Parameters:

- by Voltage Low Batt threshold HR40097
- or
- by Low Soc threshold HR40113 and One of the 5 parameter Battery Capacity

## 9 DC Ups

### 9.1 Monitoring status and Fault conditions

#### 9.1.1 Mains or Backup – Fail and Low Batt – Diagnosis and Charging.

Below are the conditions of Relays Contacts and LEDs

|        |                    | Main Input Present |            | Fault System/Battery |        |
|--------|--------------------|--------------------|------------|----------------------|--------|
|        |                    | Yes                | No         | Yes                  | No     |
| Fail / | LED                |                    | - <30%     |                      |        |
|        | Relay Contact 8-10 |                    | batt < 30% |                      |        |
| Main/  | LED                |                    |            |                      |        |
|        | Relay Contact 5-7  |                    |            |                      |        |
| LED    | Charging           | Cyclic             |            |                      | Cyclic |
|        | Diagnosis          |                    |            | Blinking             |        |

Note:

(1) Contact relay Mains/Backup switch at least 5 seconds after disconnection of Power.

#### 9.1.2 Relay Contact Rating

Max.DC1: 30 Vdc 1 A; AC1: 60 Vac 1A: Resistive load (EN 60947-4-1).Min.1mA at 5 Vdc: Min. permissive load

## 9.2 Input Device

For all devices the robust input range voltage is from 85 – 305 Vac, in this way all kind of environmental variations are considered. On the input side it is possible to measure and record the data voltage min. max. and Avg. in real time. It is also possible to log the data

## 9.3 Output Load

### 9.3.1 Output Voltage

The output Load in normal mode, when the Mains Input Vac Voltage is available, follows the charging battery DC output voltage. The minimum and maximum range stabilized are the following:

- CBI60024: 22 – 28.8 Vdc; 30 Vdc for NiCd (Without battery connected out. Voltage fixed at 24Vdc)
- CBI60048: 44 – 57.6 Vdc; 62 Vdc for NiCd (Without battery connected out. Voltage fixed at 48Vdc)

### 9.3.2 Output load management

By means of the remote communication interfaces it is possible to configure the management of the load output. In addition to load always ON or load always OFF, the load ON- and OFF- timings and therefore the duty-cycle can be programmed. Moreover, load activation and deactivation can be related to events such as external start button activation. This provides enhanced flexibility to the product.

## 9.4 Back up conditions: “Buffering Time”

The Current on the Load depend also from the Battery Size  
Some example of buffering time depending on the LOAD Output as a function of the Ah of the battery.

| Back Up Time | BATT<br>1.2 Ah | BATT<br>3 Ah | BATT<br>7.2 Ah | BATT<br>12 Ah | BATT<br>100 Ah |
|--------------|----------------|--------------|----------------|---------------|----------------|
| Load 1.5 A   | 20 min         | 60 min       | 200 min        | 400 min       | /              |
| Load 3 A     | 3.5 min        | 30 min       | 120 min        | 240 min       | /              |
| Load 5 A     | 1 min          | 15 min       | 55 min         | 100 min       | /              |
| Load 7.5 A   | No             | 10 min       | 30 min         | 60 min        | /              |
| Load 10 A    | No             | 7 min        | 20 min         | 45 min        | 20 h           |
| Load 12 A    | No             | 3 min        | 12 min         | 30 min        | 600 min        |
| Load 15 A    | No             | No           | 9 min          | 20 min        | 400 min        |
| Load 20 A    | No             | No           | 7 min          | 13 min        | 240 min        |

It is possible to set a buffering time by Web Server, Holding Register 40104

## 9.5 Start from Battery Only, No Input Mains Vac

The feature allows turning on the device and the load connected to it with the only battery connected in the absence of mains.



Press the push-button for 3 sec max. (No. 9), in the front panel of the device, to switch ON the system when mains is not available.

It is possible also to activate the contact from remote with an external push button mounted on the front panel or driven by a PLC. The connection is done using an RTCONN cable connected on the Start from Battery remote contacts (No.12). Please notice that the remote Start from battery contacts also

act as the UPS Enabling or Disabling control. Refer to section 8.8 for further information.

## 9.6 Low Bat and Protection against total battery Discharge

During the Backup condition, the device continuously monitors the state of the battery.

### 9.6.1 Low Bat - Threshold alarm of Battery almost flat

- When the battery voltage becomes lower than the threshold in **Volt**
  - The default values are on the data sheet for each product
    - the device switches the Relay and Turn ON the LED – see section 8.1.1.
  - It is also possible to use a remote communication to configure the alarm and receive it:
    - Modify the Low bat Threshold alarm by means of the Holding Register HR40097
    - Receive an Alarm on the Holding Register HR40035.1
- When the battery goes less than the threshold in **SoC%**
  - It is possible to use a remote communication to configure the alarm and receive it:
    - Modify the SoC-low alarm threshold by the Holding Register HR40113
    - Receive an Alarm on the Holding Register HR40033.8

### 9.6.2 Low Voltage Deep Discharge battery - LVD Protections against total Battery discharge

- When the battery becomes lower than the threshold in **Volt**
  - The default values are on the data sheet for each product
    - the device automatically turns off to prevent a battery deep-discharge


- It is possible to configure the threshold and delay time for the automatic power OFF using a remote connection as follows:
  - To modify the voltage threshold for switch off, Holding Register HR40071
  - To modify the Delay for switch off, Holding Register HR40107
- When the battery goes less than the threshold in **SoC%**
  - It is possible to configure the threshold and delay time for the automatic power OFF using a remote communication as follow:
    - To modify the SoC turnoff threshold for switch off, Holding Register HR40076
    - To modify the Delay for switch off, Holding Register HR40107

## 9.7 Time Buffering Setting

It is possible to set a buffering time only by Modbus via ADELViewSystem software, Holding Register 40104.

## 9.8 UPS Disabling

This function is aimed at disabling the backup when the machine connected at the output load of the CBI is turned off. The backup function is enabled only in the case the mains outage occurs when the machine is on. Please refer to the following figure

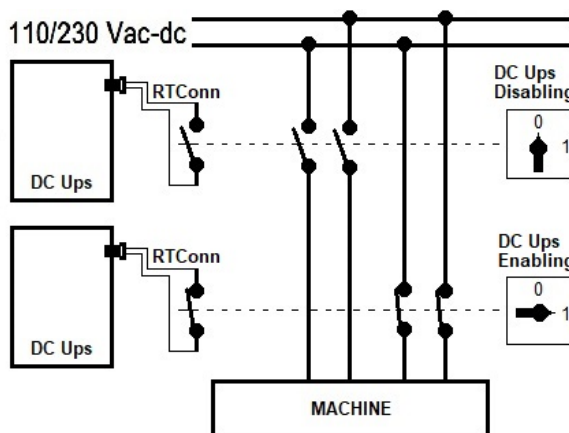

The functionality uses the Start from battery remote contacts (12) and the “Backup Inhibit” control in the “Configuration->Device” pane of the webserver or the HR40088 Backup Inhibit holding register. If the Start from battery remote contacts (12) are shorted together, the UPS and therefore backup is enabled irrespective of the HR40088 setting and webserver control. If, on the contrary, the remote contacts (12) are not shorted together, the HR40088 and webserver control are used. Please refer to the following table for clarification.

|                                                        | Start from battery<br>(12) OPEN | Start from battery<br>(12) SHORTED |
|--------------------------------------------------------|---------------------------------|------------------------------------|
| HR40088 = 0<br>Webserver Backup<br>inhibit not checked | Backup enabled                  | Backup enabled                     |
| HR40088 = 1<br>Webserver Backup<br>inhibit checked     | Backup disabled                 | Backup enabled                     |

## 9.9 PC Shut Down

This feature allows to switch off a computer powered by the DC-UPS output load when the input mains becomes unavailable and the device powers the load from battery. If the PC shutdown feature is enabled, the DC-UPS monitors the mains status and drives the PC to initiate a controlled shutdown with precise timings.

In order to do that, it is necessary to connect the DC-UPS device to a computer by means of the Adelsystem Modbus cable P/N: RJUSB280-1 and configure the ADELViewSystem application to manage the PC shutdown using Modbus RTU or use the ethernet-based Modbus TCP connection.


Setup of the DC-UPS:

- To enable the PC Shutdown feature, the value in HR40111 must be non-zero. Otherwise the PC shutdown algorithm will not be implemented and the UPS will turn itself off when the battery has discharged or when the buffering time (HR40104) has expired.
- After the DC-UPS setup steps have been done as described, in the case of mains outage the DC-UPS will implement the PC shutdown algorithm.
- Such algorithm is comprised of 4 steps, which are outlined below. Steps 1,2, and 3 have durations that can be configured by the user



by means of specific holding registers, which are mentioned in the description of the relative step.

- The sequence of steps begins at the moment when mains becomes unavailable



A detailed description of each of the steps follows:

- 1 Time Buffering:** During the Time Buffering phase, if the input mains becomes available again, the shutdown action is not done and the DC-UPS recharges the battery. The duration of this step can be set using HR40104 as described. If HR40104 = 0, the buffering time is limited by voltage or SoC only, as described in section 8.6 and the PC shutdown step is done only if HR40111 is nonzero, otherwise the device turns off.
  - Write in the HR40104 the desired delay time value "Time Buffering". After such time has expired, the device to enters the PC Shutdown phase Step 2 if HR40111 is nonzero, otherwise the CBI will turn off.
  - Moreover during the Time Buffering phase the device transitions immediately to Step 2 in the following cases:
    - if the battery voltage becomes lower than Low Bat HR40097
    - if the battery State-of-charge becomes lower than Low SoC HR40113
      - to enable this function it is necessary to configure at least one of the following Battery Capacity parameters HR40105...106...108...109.112
    - if the "Force PC Shutdown" HR40041 is written the value 1
- 2 PC Shutdown:** at the onset of this step, the DC-UPS instructs ADELViewSystem to initiate the actual PC shutdown. If, during this step, the input mains becomes back available, the shutdown process continues without interruption.
  - The duration of this step can be set using HR40111. It is important that the duration of this step be long enough to allow the PC to complete its shutdown.
    - Write in the HR40111 the desired time value for "Time PC Shutdown"; default value 60 sec.
  - The device transitions to Step 3 at the expiry of this time
- 3 Switch Off OUT:** during the "Switch Off OUT" time the device turns OFF the output Load terminals and keeps them off for the time specified in HR40034 even if the input mains becomes back available: the Switch Off OUT step cannot be interrupted.
  - Write in the HR40034 the desired time value for "Switch Off OUT"; default value 20 sec. The value should be set long enough to ensure that the PC internal circuitry is completely reset – please refer to the PC user manual to set a suitable value
- 4 Turn On Output:** in this step the DC-UPS performs its own shutdown if the input mains is not available, or turns back on the load output if the input mains is available.

## 9.10 Protection Features

- **On the primary side:** the device is equipped with an internal fuse. If the internal fuse is blown, most likely there is a fault in the device. In that case, the device must be returned to factory for analysis
- **On the secondary side (battery and load):** The device is electrically protected against short circuits and overload.
- **Polarity reversal:** the module is automatically protected against reversal of battery polarity.
- **Over current and output short circuit:** the unit limits the output current (see the technical data).
- **Deep discharge:** not possible. The unit disconnects the battery when a minimum voltage level is reached.

## 9.11 Thermal behavior

No derating for surrounding air temperature up to 50°C. For ambient temperature above 50°C, the output current must be reduced by 2.5% per °C, max 70°C. At the temperature of 70°C the output current will be 50% of In. The equipment does not switch off in case of ambient temperature above 70°C or thermal overload. The devices are protected for Over temperature conditions "worst case"; in this situation the device shuts down the output and automatically restarts when the inner temperature falls within limit.

## 10 Networking

### 10.1 Device configuration by Ethernet "Aux2"

Configuration of the Ethernet interface by HTTP server via the Web browser:

#### 10.1.1 Connect HTTP server for the first time

- Connect the device to the network with a standard CAT5e or better LAN cable plugged into the Aux2 connector (RJ45) on the device

front panel. The device is factory-configured to operate with a fixed IP address (192.168.1.100) on the standard HTTP port (number 80).

- A different static IP address can be assigned to the device or a dynamic IP address can be assigned using the DHCP protocol. The network configuration can be carried out using the internal webserver. Type the IP address of the device into any browser's address bar (as an example "192.168.1.100") then the login page appears requesting the username and the password.
- To access the internal webserver, at the login page, the following credentials must be used:
  - **Username:** user, admin or service
  - **Password:** password
- Select the username according to the level of access required.
- Note: after 20 minutes of inactivity the login credentials must be entered again.

### 10.1.2 Customizing the ethernet interface and services

- Select "Configuration" and then "Network" to display the following groups of parameters and other informations:
  - Account
  - Generic configuration
  - TCP/IP Configuration
  - HTTP(s) Configuration
  - SNMP

#### 10.1.3 Account

- The Account group (Fig. 7) allows the customization of the data for the HTTP server login page. Any changes must be confirmed with the confirm button at the bottom of the page.

Fig. 7 – Account settings

### 10.1.4 Generic and TCP/IP Configuration

- Fig. 8 shows the TCP/IP Configuration group with parameter default values. They allow unique identification of the unit in the network.

Fig. 8 – IP settings

If "Enable DHCP" is selected, the IP address is automatically assigned by a DHCP server, that must be active on the network; in this case the System IP, Subnet Mask and Gateway textboxes show the assigned values and are not editable.

The device supports access using the Virtual LAN protocol. In the case "Enable VLAN" checkbox is not selected the device will not operate in the VLAN. If "Enable VLAN" checkbox is selected then a "VLAN ID" textbox will appear and should be populated with an ID in the range 1 to 4094, matching the one of the VLAN the unit is operating in. Any changes must be confirmed with the confirm button at the bottom of the page.

#### 10.1.5 HTTP(s)

The DEVICE supports HTTP and HTTPs protocols. If the client system supports multicast DNS (mDNS) the device can be accessed by its name (as set under Generic Configuration) followed by ".local".

Fig.9 – HTTPconfiguration

HTTP Port allows redirecting the HTTP traffic to a port different than the standard HTTP port 80. In that case, access to the HTTP server from a browser must be made using the syntax <http://ipaddress:portnumber>. As an example, if the IP address is 192.168.1.100 and the selected HTTP port is 5678 then the following IP string should be entered in the browser <http://192.168.1.100:5678>.

Secure HTTP (HTTPS) can also be selected, using an internal certificate or a certificate provided by the customer.

## HTTP(s) configuration

Webserver mode:

HTTP port:

Certificate: Internal certificate for <https://CBI6024A-375951.local>  
Please download from [www.adelsystem.com](http://www.adelsystem.com) the Adel System CA certificate and install it in the trusted root certification authority folder.

Fig. 10 – HTTP(s) configuration

## 10.1.6 SNMP

The device can act as SNMP server. An ADELSYSTEM MIB table file can be downloaded from the webserver, which consists of a list of parameters that can be remotely read, or read-written through the SNMP protocol. Each parameter (OID) is mapped one-to-one to a Modbus RTU holding register. Refer to the document "Adelsystem parameter table" for the description of each parameter.

SNMP

SNMP mode:

Authentication algorithm:

Encryption algorithm:

Authentication password:

Encryption password:

Use same password: ☒ Not recommended for security reasons.

System Name:

System Description:

System Location:

System Contact:

Traps:

MIB file: Please download the SNMP MIB from [adelsystem.com/foryou/AdelSystemCBI.mib](http://adelsystem.com/foryou/AdelSystemCBI.mib).

Fig. 11 – SNMP settings

All the fields in the SNMP group of settings allow a maximum of 31 characters, except "System Description" and "System Location", which allow 255 characters maximum. The actual content of the page depends on the SNMP version selected (v1, v2c or v3). Any changes must be confirmed with the confirm button at the bottom of the page.

## 10.1.7 Email configuration

The device can be configured to send emails using the SMTP protocol when one or more alarms are detected. Please refer to the SMTP server provider to set the correct "SMTP server name" and supported "SMTP encryption" and "SMTP port". Moreover, "Username" and "Password" refer to the credentials connected with the account of the "From address" mail account.

e-mail

Enabled e-mails: ☒ on alarms

From address:

SMTP server:

SMTP encryption:

SMTP port:

Username:

Password:

Send emails to:

Result of last sending attempt: No email sent yet

Fig. 11 – Email configuration

## 10.1.8 Device configuration by Web-Server

The Dashboard page shows the main operating parameters of the device.

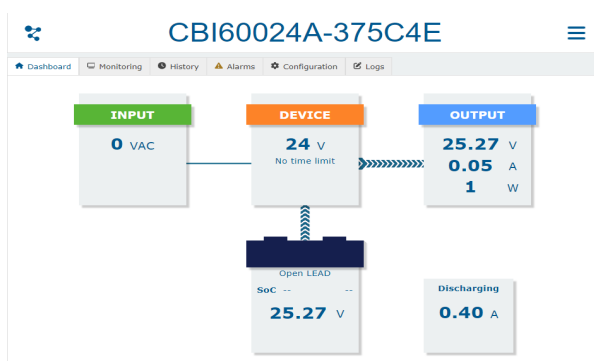


Fig. 13 – Device status

## 10.1.8.1 Follow the Instructions (Web configuration)

The Device page under Configuration shows detailed information on the device and installed software, to be communicated to the service technician if requested. Fig. 14 shows example information: the actual values will be different.

The "Device Identification" button allows to locate the device by emitting a beep and turning on all the LEDs in sequence.

The "Reboot device" button allows to reboot the device remotely, only if no battery connected. Current settings will be maintained. Any changes not saved with the confirm button will be lost.

"Device configuration" replicates the settings some of which are also accessible on the device front panel by pressing the "battery start /Config" button (refer to the relevant section of this manual). Any changes must be confirmed with the confirm button at the bottom of the page.

"Battery type" selects the battery chemistry from a drop-down list.

The "Fast charge" checkbox is greyed because it is a read-only replica of the Fast-charge (No.18) jumper status

The "Charging current" sets the battery charge current limit.

Fig. 14 – Device settings

## 10.1.8.2

## Saving the customized parameters

To save the changes into the device non volatile memory press the confirm button at the bottom of the page.



## 10.2 How to restore default values in the device (Customer service)

## 10.2.1 Resetting the customized parameters to their default values

In case the login user name or password was forgotten, or the TCP/IP configuration was set incorrectly and the device is no longer reachable, please follow this procedure to restore the default settings:

- Turn OFF the device
- Press the CONFIG button 9 on the front panel and keep it pressed
- Turn ON the device and continue to keep the button pressed (all the 4 configuration LEDs (6, 29, 7, 8) will stay ON during this time)
- After 5 seconds the diagnosis LEDs (n. 8) will blink alternatively in red and green while LED 7 will blink slowly, indicating the first option is pending.
- Release the button
- Now click briefly on the button to select one of 4 options listed in the table below
- Confirm the choice by keeping the CONFIG button pressed for 5 seconds until the LEDs stop blinking and a sweep of all the LEDs occurs. After that the device reboots automatically and is then ready for use

| Menu option                     | LED Configuration: |             |             |   |
|---------------------------------|--------------------|-------------|-------------|---|
|                                 | LED: 6             | 29          | 7           | 8 |
|                                 |                    |             |             |   |
| 1 - Force DHCP                  | Off                | Off         | Slow blinks |   |
| 2 - Recovery application        | Off                | Slow blinks | Off         |   |
| 3 - Reset network configuration | Off                | Slow blinks | Slow blinks |   |
| 4 - Restore to factory defaults | Slow blinks        | Off         | Off         |   |

The four options help solve issues that may potentially occur especially during system installation and commissioning

- **1 – Force DHCP:** restarts the device with the DHCP enabled until reboot, in the case the DHCP was accidentally disabled leading to the device no longer being reachable via infrastructure. Notice that the TCP/IP configuration must be changed on the HTTP server in order to make this setting permanent
- **2 – Recovery application:** runs a tiny application that allows uploading a new application firmware in the unlikely event the current application is not operable or corrupted. Only to be used if instructed by the customer service
- **3 – Reset network configuration:** restores the default values of the networking parameters, including the login credentials). After this operation, the device will be accessible at the default static IP address <http://192.168.1.100>
- **4 – Restore to factory defaults:** restores all the default values of the device. Notice that all the user's data such as battery chemistry selection, parameter customizations, histories, logs, etc. will be lost


## 10.1 Modbus RTU “Aux1”

The device support the Modbus RTU protocol based on an RS 485 bus. The protocol requires that only one device be the master, all the other devices shall be slave.

### 10.1.1 Electrical characteristics RS485


The unit is a **SLAVE** in a MODBUS network, with the following specifications:

|                       |                                                                                                                                    |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Transmission mode:    | MODBUS RTU                                                                                                                         |
| Electrical Interface: | RS485 half-duplex serial line                                                                                                      |
| Baud rate:            | 4800 / 9600 / 19200 / 38400 (default) bps                                                                                          |
| Data format:          | 8 data bits                                                                                                                        |
| Parity and stop bits: | Parity None with 2 stop bits<br>Parity Odd with 1 stop bit<br>Parity Even with 1 stop bit (default)<br>Parity None with 1 stop bit |
| Slave address:        | configurable in the range 1 (default) to 247                                                                                       |
| Connector type:       | RJ45                                                                                                                               |
| Cable:                | wire RJ-45 plug                                                                                                                    |

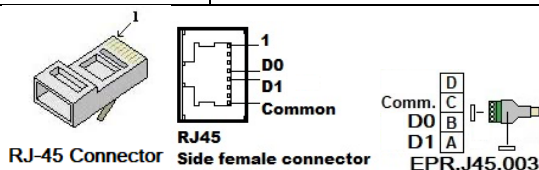

| Pin Number: | Modbus RTU: Pin Name | Alternative Name |
|-------------|----------------------|------------------|
| 4           | D0                   | D-               |
| 5           | D1                   | D+               |
| 8           | Common               | Common           |

### 10.1.2 Connection Diagram

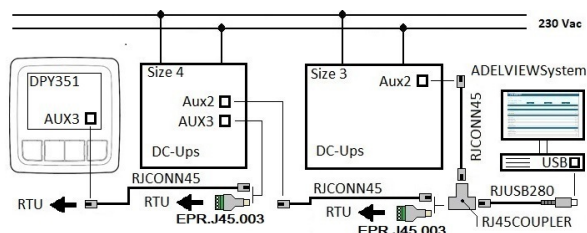

- RJCONN45: standard RJ45 cable also provided by ADELSYSTEM. It is possible to connect in daisy chain up to 32 devices, max distance 1000m, from the AUX2 connectors.
- In the connection scheme shown above, each slave device must have a unique Modbus device address for proper communication. In order to avoid signal noise, the use of line termination resistors (120 Ohm) is recommended. The effect of signal noise becomes more relevant with long cable length and/or high baud rates. The serial Modbus connection uses an RS485 port for connection between the master port and the corresponding interfaces of the slave according to the EIA/TIA RS485 standard.
- RJUSB280-1: cable interface RS485 – USB, max length 2m, for connection to PC
- Note: If both, DPY351 and ADELVIEWSystem, are running in the same network at the same time, The DPY351 must be set for the Modbus “Viewmode”.
- RJ45COUPLER: is a T connection RJ45 for the implementation of daisy-chain with CBI Size3 and 4 devices



### 10.1.2.1 Bus Termination

No.16: The device includes a full “fail safe” conditions and the bus termination. In such devices, the fail-safe function and line terminators can be individually enabled or disabled by means of the dip-switches located on its front panel, as shown in the following figure:

Fail-safe:

- 1 Fail Safe D1, 560 Ohm (Pull Up) to 5 V
- 2 Terminations: 120 Ohm (between Modbus lines)
- 3 Fail Safe D0, 560 Ohm (Pull Down) to 0 V

(You have to remove the label to discover the switches)

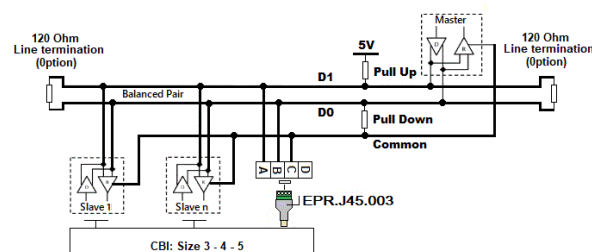

### 10.1.2.2 Functional characteristics of the Adelsystem devices using Modbus

The CBI, which is a Modbus slave device, waits for a request from the master, and checks the received packet before performing the action requested in it. In case of errors in the request (e.g. illegal function, illegal address, etc.), the master is notified with an error packet. If no errors are found, the requested action is performed and a reply is sent to the master. All the parameters are 16 bit Holding Registers (HR), with address range starting from 40001. Information contained in the Holding Registers is to be interpreted as **16-bit unsigned integer (Range 0 ... 65535)**.

The following settings can NOT be modified using Modbus:

- The battery chemistry selection
- The “Selection out voltage” setting, read at powerup only, and used to select the device rated output voltage (refer to section Output Voltage)

Finally, some controls such as the fast-charge jumper of the UPS disabling jumper have a different management based on the product. The alarms that are mapped as bitmask in holding registers are active when the bit value is 1.

Note that valid values written to writable holding registers are automatically stored in the device non-volatile memory.

The following Modbus functions for HR management are supported: function code 3 (read holding registers), function code 6 (preset single register), function code 16 (preset multiple registers). A summary of the implemented function codes follows.

*In all cases, the slave address must be within 1 and 247; the data addresses are computed subtracting 40001 from the holding register number, e.g. to access holding register 40092 the value (40092 – 40001) = 91 = 0x5B must be entered. DAmx is the data address of the holding register with the highest address 40xxx from the parameters map and expressed as (40xxx – 40001). The CRC at the end of each frame is computed as detailed in the “Modbus over serial line specification and implementation guide V1.02” document, available for free from [www.modbus.org](http://www.modbus.org).*

### Function code 3 (0x03): Read Holding Register

#### Request (Master to Slave)

| Field name ->  | Slave address | Function code | Start address | Number of registers (N) | CRC      |
|----------------|---------------|---------------|---------------|-------------------------|----------|
| Field bytes -> | 1 byte        | 1 byte        | 2 bytes       | 2 bytes                 | 2 bytes  |
| Range ->       | 0x01 – 0xF7   | 0x03          | 0x0000 – DAmx | 0x0001 – DAmx+1         | see text |

Example 1 - reading the first holding register (i.e. the slave address) of a CBI device having slave address 1 (factory default):

**01 03 00 00 01 84 0A**

Example 2 - reading the first 114 holding registers of a CBI device having slave address 1 (factory default):

**01 03 00 00 72 C5 EF**

#### Response (Slave to Master)

| Field name ->  | Slave address | Function code | Number of data bytes to follow | Registers data | CRC     |
|----------------|---------------|---------------|--------------------------------|----------------|---------|
| Field bytes -> | 1 byte        | 1 byte        | 1 byte                         | N * 2 bytes    | 2 bytes |

|          |                                   |      |       |                  |          |
|----------|-----------------------------------|------|-------|------------------|----------|
| Range -> | 0x01 – 0xF7 (same as the request) | 0x03 | 2 * N | actual data read | see text |
|----------|-----------------------------------|------|-------|------------------|----------|

Example: response of a CBI having slave address 1 (factory default) to a read request of the first holding register (i.e. its own slave address):  
**01 03 02 00 01 79 84**

#### Error (Slave to Master)

| Field name ->  | Slave address                     | Function code | Exception code | CRC      |
|----------------|-----------------------------------|---------------|----------------|----------|
| Field bytes -> | 1 byte                            | 1 byte        | 1 byte         | 2 bytes  |
| Range ->       | 0x01 – 0xF7 (same as the request) | 0x83          | 0x01 - 0x02    | see text |

#### Function code 6 (0x06): Write Single Register

##### Request (Master to Slave)

| Field name ->  | Slave address | Function code | Data address of the register | Value to write   | CRC      |
|----------------|---------------|---------------|------------------------------|------------------|----------|
| Field bytes -> | 1 byte        | 1 byte        | 2 bytes                      | 2 bytes          | 2 bytes  |
| Range ->       | 0x01 – 0xF7   | 0x06          | 0x0000 – DAmx                | 0x0000 to 0xFFFF | see text |

##### Response (Slave to Master)

| Field name ->  | Slave address                     | Function code | Data address of the register        | Value written                         | CRC      |
|----------------|-----------------------------------|---------------|-------------------------------------|---------------------------------------|----------|
| Field bytes -> | 1 byte                            | 1 byte        | 2 bytes                             | 2 bytes                               | 2 bytes  |
| Range ->       | 0x01 – 0xF7 (same as the request) | 0x06          | 0x0000 – DAmx (same as the request) | 0x0001 – 0xFFFF (same as the request) | see text |

#### Error (Slave to Master)

| Field name ->  | Slave address                     | Function code | Exception code | CRC      |
|----------------|-----------------------------------|---------------|----------------|----------|
| Field bytes -> | 1 byte                            | 1 byte        | 1 byte         | 2 bytes  |
| Range ->       | 0x01 – 0xF7 (same as the request) | 0x86          | 0x01 - 0x02    | see text |

#### Function code 16 (0x10): Write Multiple Register

##### Request (Master to Slave)

| Field name ->  | Slave address | Function code | Data address of the first register (addr) | Number of registers to write (N) | No. of data bytes to follow | Values to write                  | CRC      |
|----------------|---------------|---------------|-------------------------------------------|----------------------------------|-----------------------------|----------------------------------|----------|
| Field bytes -> | 1 byte        | 1 byte        | 2 bytes                                   | 2 bytes                          | 1 byte                      | N * 2 bytes                      | 2 bytes  |
| Range ->       | 0x01 – 0xF7   | 0x10          | 0x0000 – DAmx                             | 0x0000 to DAmx +1                | 2 * N                       | data @addr, data @ (addr+1) etc. | see text |

##### Response (Slave to Master)

| Field name ->  | Slave address                     | Function code | Data address of the first register  | Number of registers written | CRC      |
|----------------|-----------------------------------|---------------|-------------------------------------|-----------------------------|----------|
| Field bytes -> | 1 byte                            | 1 byte        | 2 bytes                             | 2 bytes                     | 2 bytes  |
| Range ->       | 0x01 – 0xF7 (same as the request) | 0x10          | 0x0000 – DAmx (same as the request) | N                           | see text |

#### Error (Slave to Master)

| Field name ->  | Slave address                     | Function code | Exception code | CRC      |
|----------------|-----------------------------------|---------------|----------------|----------|
| Field bytes -> | 1 byte                            | 1 byte        | 1 byte         | 2 bytes  |
| Range ->       | 0x01 – 0xF7 (same as the request) | 0x90          | 0x01 - 0x02    | see text |

#### 10.1.2.1 Communications parameters settings

Devices are configured for communications at **38400bps** with **even parity (1 stop bit)** by default. The permissible slave address range is 1-247. Such address must be unique for every slave in the same Modbus network and it is stored in HR 40001. Its default value is 1. Similarly it is possible to modify the serial communication default settings (baud rate and parity), that are stored in holding registers 40002 and 40003. **After any of them are modified, power must be cycled in order to apply the new settings. Instead, a change in the slave address (HR40001) becomes effective immediately.** Holding register 40003 sets the parity value for the serial communications and also the number of the expected stop bits. It always uses the communications parameter (HR40001 thru HR40003) values stored in the internal user non-volatile memory.

#### 10.1.3 Connect the DPY351 to Modbus in View Mode

In a Modbus network there can only be one master. Normally the DPY351 is the master, it polls the network and it receives information from other ADELSYSTEM devices, which are the slaves. If it is necessary to connect N DPY351 in the same Bus network, then N-1 displays shall be configured in View Mode. In this case only one DPY351 is a master and it polls the devices, the other DPY351s receive the data from the Bus and they take the information into consideration only if these parameters are originated from a device in their list, otherwise they ignore the information.

View Mode is useful also when the master of the network is an external device such as a PC, but there is the need to monitor the status of the network from other places.

To configure the DPY351 in View Mode it is necessary to go in: Menu>Menu Config>Other Settings>Modbus View Mode.

#### 10.2 Connect ADELSYSTEM to devices

##### 10.2.1 ADELSYSTEM configuration

ADELSYSTEM is a CAN-based communications bus which is compatible with the CANopen standard protocol. For the correct functioning of the Adelsystem devices connected with the CBI via the ADELSYSTEM, the "CAN bus mode" must be set to "CANopen master".





Fig 12 – CAN bus configuration

Remote device connection by terminals N°22. With ADELSYSTEM communication protocol it is possible to connect and drive other devices for monitoring, configuring, driving and updating them.

Connect the cable RTConn to AUX1 on the device as shown and connect the other side of the cable to the CAN terminals L (Brown) and H (White) of the DEVICE, with a line termination (LT) resistor 120 Ohm, present inside the device and enabled by Jumper N°26.






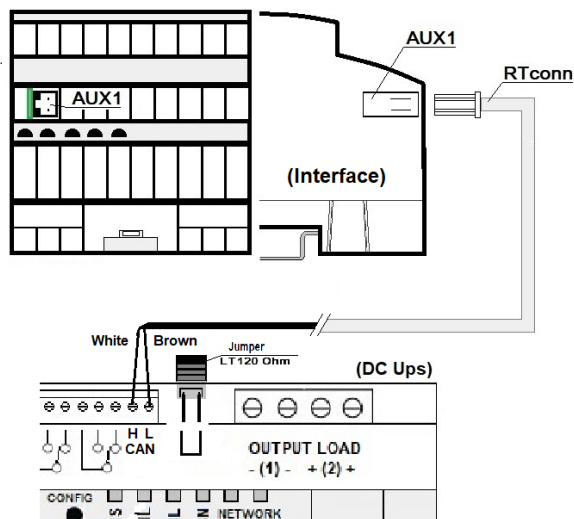


## 11 Din Rail Mounting



All modules must have a minimum vertical and horizontal distance of 10 cm to this power supply in order to guarantee sufficient auto convection. Depending on the ambient temperature and load of the device, the temperature of the housing can become very high.

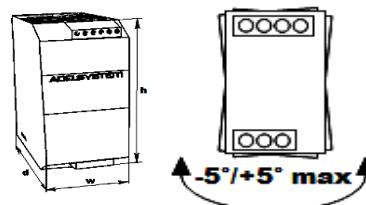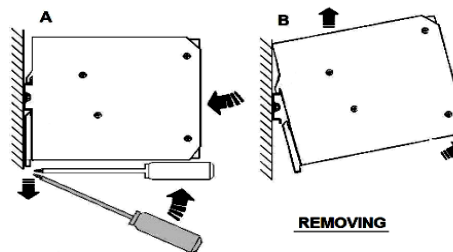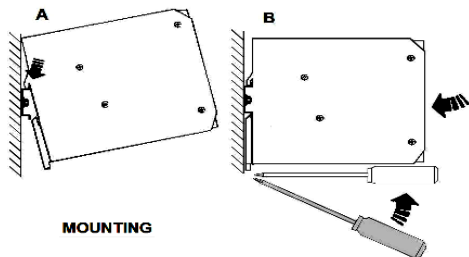

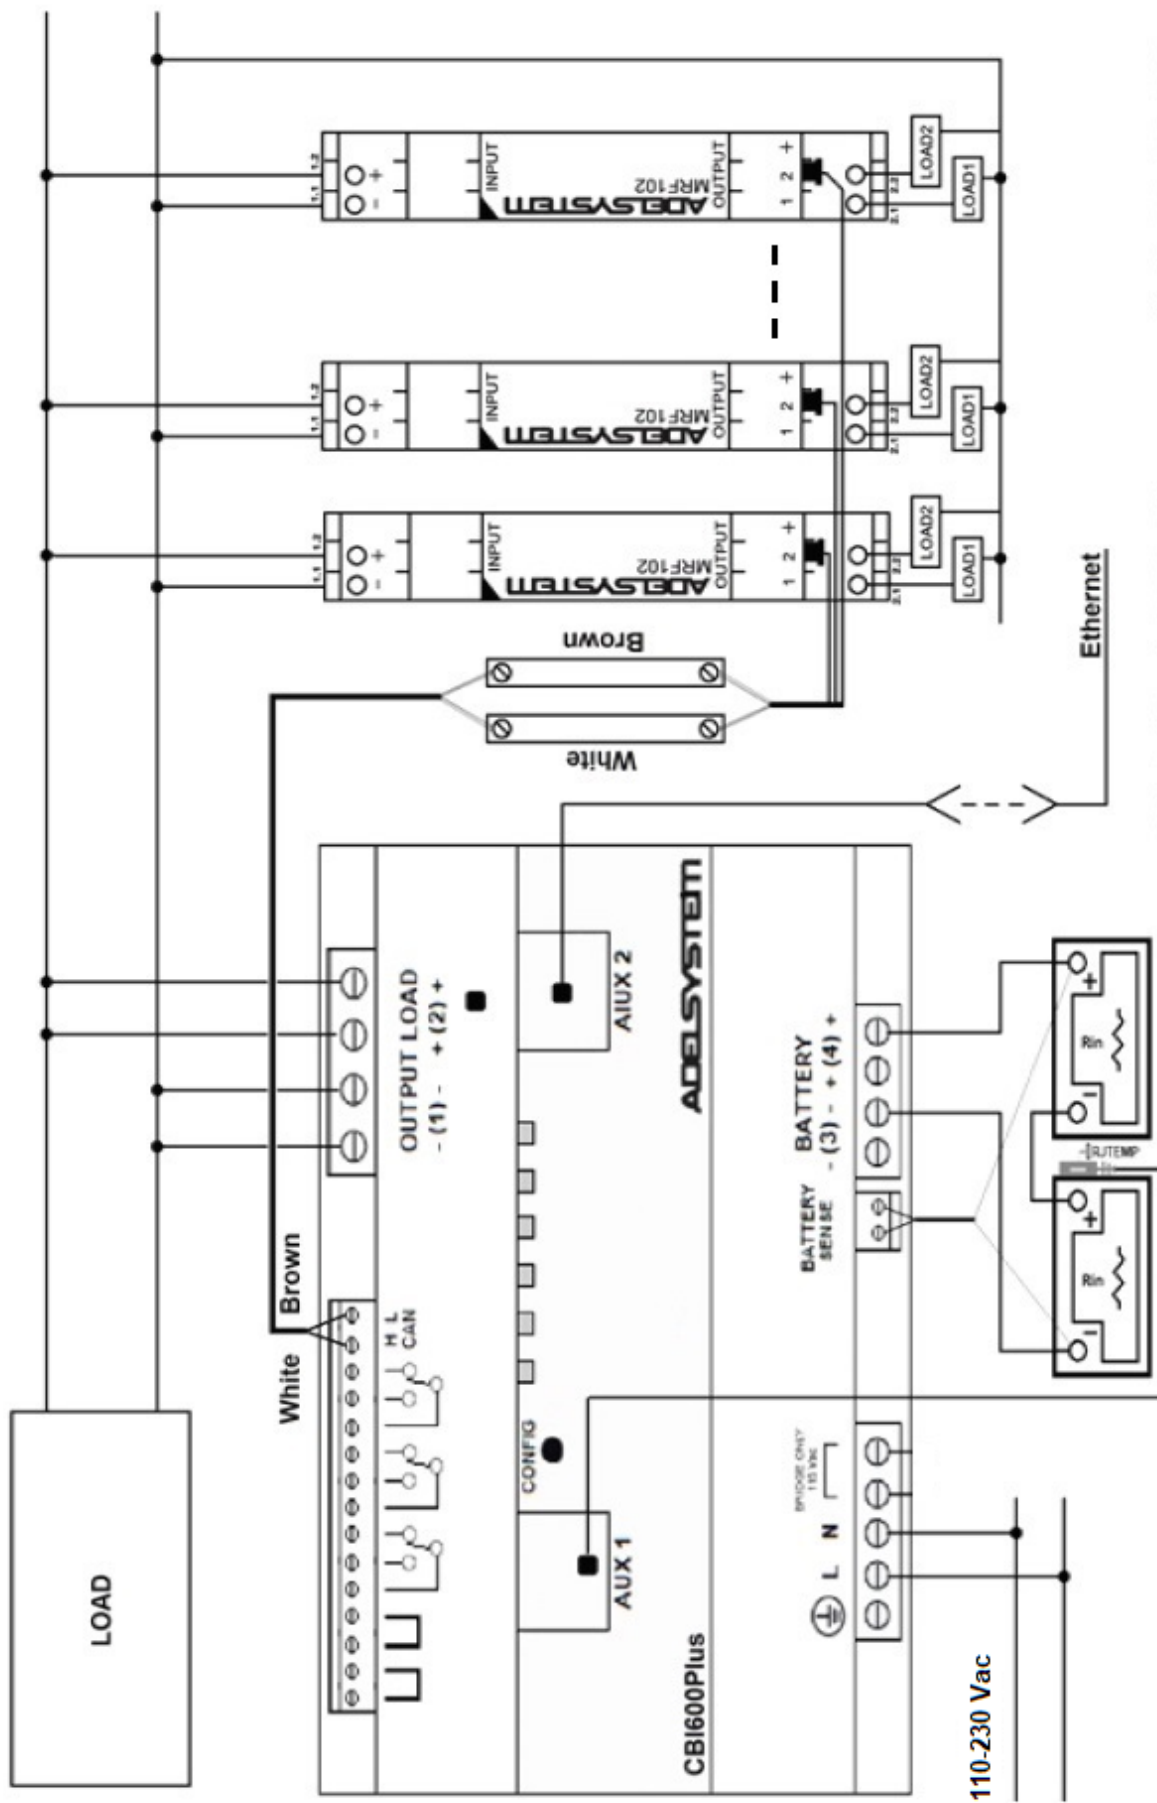

# CBI2420Plus + MRF102